

# AURELIA® 130

15gg Nylon Fully Coated Latex Glove with a Black Sandy Latex Palm Coating



S/7	M/8	L/9	XL/10	XXL/11
130-7	130-8	130-9	130-10	130-11

Instructions for use, in accordance with Regulation EU 2016/425 on PPE

## WARNING

This product contains Natural Rubber Latex which may cause allergic reactions in some individuals, including anaphylactic shock. If you experience a reaction to this product, discontinue use immediately and consult your physician. The gloves do not contain any other substances at levels that are known to, or suspected to, adversely affect user health or hygiene. No protection offered against liquids or chemicals. Do not use these gloves to protect against serrated edges or blades or naked flames. These gloves shall not be worn when there is a risk of entanglement by moving parts or machines. Always confirm that products are in conformance with standards, tested and to the level that is in accordance with your requirements. The protection against risks or hazards which are not mentioned in this document is not warranted. These levels of performance are obtained from the tests carried out according to the conditions specified in the applicable standards. The levels of performance are only valid for new gloves, not washed or regenerated. No flame protection is claimed. The gloves are not suitable for contact with naked flame. For gloves with two or more layers, the overall classification does not necessarily reflect the performance of the outer layer.

## DESCRIPTION OF USE

These gloves are employed and intended to protect against mechanical risks of abrasion, blade cut, tear and puncture of palm in working environment. The gloves meet the requirement for resistance to puncture, may not be suitable for protection against sharply pointed objects such as hypodermic needles.

## DISPOSAL INSTRUCTIONS

At the end of life, used gloves maybe contaminated with hazardous substances, dispose of according to the Local Authority Regulations, landfill or incinerate under controlled conditions.


**Donning (Putting on):** Wash and dry your hands completely before use. Always inspect the gloves internally and externally for any defects or imperfections. Ensure the gloves fit well.

**Doffing (Removing):** Avoid touching contaminated or cold gloves. Place the fingertips into the palm of the other glove. Pull the glove until almost off. Repeat on the other hand. With both gloves almost off shake both hands to remove the gloves fully.

## CARE INSTRUCTIONS

### Storage and Cleaning:

After use, clean the gloves thoroughly with a dry cloth to remove any contaminants. If the gloves are to be re-worn store in such a way that the inside lining can dry out easily. These gloves cannot be washed. Store the gloves in their original packaging in a cool and dry place. Keep away from direct sunlight, heat, flame and sources of Ozone. Glove life time in use is based on wear and abrasion.

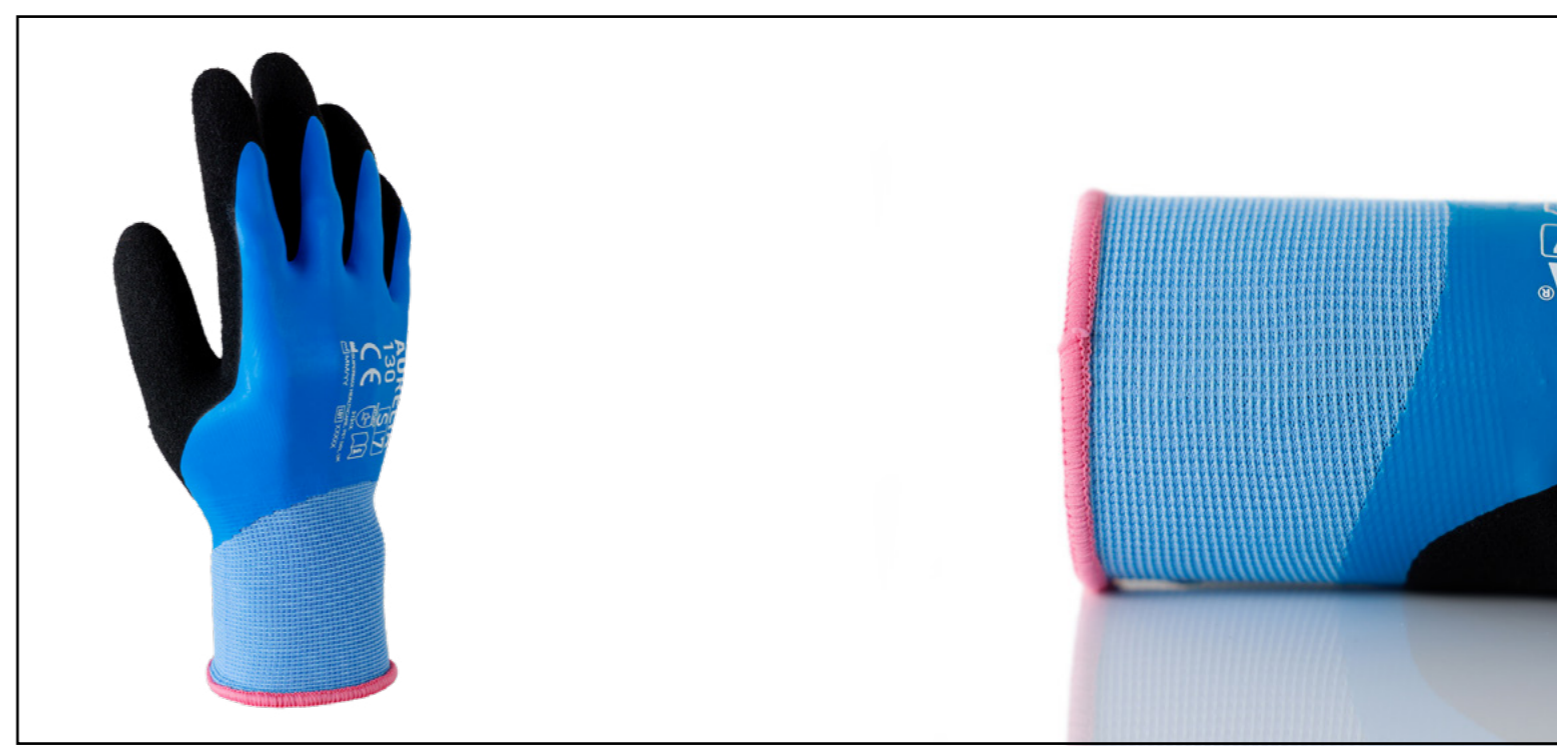

# AURELIA® 130

15gg Nylon Fully Coated Latex Glove with a Black Sandy Latex Palm Coating



## DISPOSAL INSTRUCTIONS

At the end of life, used gloves maybe contaminated with hazardous substances, dispose of according to the Local Authority Regulations, landfill or incinerate under controlled conditions.

Product is in conformity with Regulation EU 2016/425 on PPE, Category II Dexterity Level 5			
Testing Requirement	Description	Test Result	Explanation of Test and Level
EN ISO 21420:2020	General Requirements	Pass	Risk Category, Labelling
	Mechanical Hazards	3	Abrasion Resistance: Level 0-4
		1	Coupe Test, Blade Cut Resistance: Level 0-5
		3	Tear Resistance: Level 0-4
		1	Puncture Resistance: Level 0-4
		X	TDM Cut Resistance, ISO 13997: Level A-F
			'X' Not Tested

**AVAILABLE SIZES AND SELECTION:** Fit according to hand size. Allowance built in for comfort. Check fit before using in working conditions. Unit: MM - The size of these products is marked on the glove. All sizes comply with the EN ISO 21420:2020 for comfort, fit and dexterity.

Glove Size	Hand Length	Hand Circumference
S / 7	161	192
M / 8	168	204
L / 9	175	214
XL / 10	182	224
XXL / 11	189	236




Manufactured in China on behalf of:  
**UK & Europe HQ**  
Supermax Healthcare Limited  
Units 12-16 Titan Drive,  
Fengate, Peterborough,  
PE1 5XN

+441733 615215  
[sales@supermax.co.uk](mailto:sales@supermax.co.uk)  
[www.aureliagloves.co.uk](http://www.aureliagloves.co.uk)



**Europe**  
Supermax Healthcare (Europe Limited)  
Units 1001-1012  
Building 1000, Gateway Business Park,  
New Mallow Road Cork, Ireland

+353 15256724  
[sales@supermax.ie](mailto:sales@supermax.ie)  
[www.aureliagloves.ie](http://www.aureliagloves.ie)

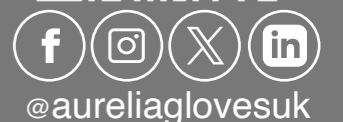

@aureliaglovesuk